




PL-3 Programming Lead Instructions

General Description

The enclosed lead can only be used between the TCH-B100 hand-held programmer and those units featuring the 3-pin rectangular connector socket:

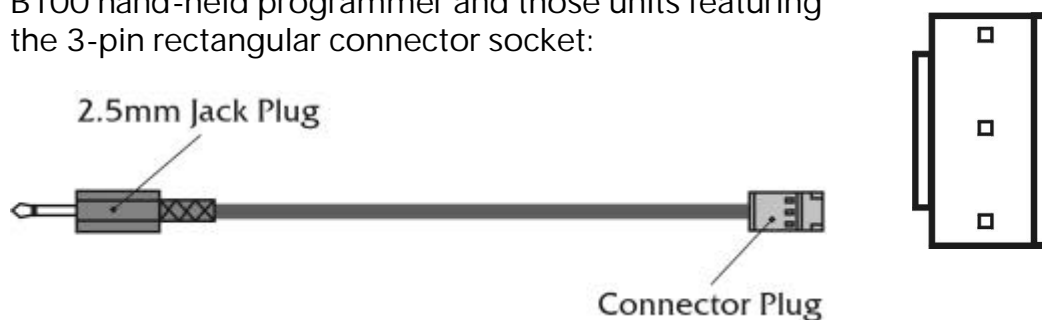

Operation - Address Setting

To program a unit connect the jack plug into the jack socket on the TCH-B100 programmer. Locate the programming connector socket (see the unit's installation instructions for further details) and then connect the connector plug. The address can now be programmed. Refer to the TCH-B100 instructions for further details.

Caution

- Only to be used with those units featuring the above connector socket.
- Remove from programmer when not in use.
- Disconnect power from loop **before** programming.

PROGRAMMING LEAD - PL3



Hochiki Europe (UK) Ltd
Grosvenor Road, Gillingham Business Park,
Gillingham, Kent, ME8 0SA, England
Telephone: +44(0)1634 260133 Facsimile: +44(0)1634 260132
Email: sales@hochikieurope.com
Web: www.hochikieurope.com

Hochiki Europe (UK) Ltd. reserves the right to alter the specification of its products from time to time without notice. Although every effort has been made to ensure the accuracy of the information contained within this document it is not warranted or represented by Hochiki Europe (UK) Ltd. to be a complete and up-to-date description. Please check our website for the latest version of this document.